

ISST - Unité intérieure - Messages d'erreur / Indoor Unit - Error display



Operation lamp	Timer lamp	Display	LED STATUS
☆ 1 time	X	E0	EEPROM parameter error
☆ 2 times	X	E1	Indoor / outdoor units communication error(only for $\geq 22k$)
☆ 3 times	X	E2	Zero-crossing signal detection error
☆ 4 times	X	E3	Indoor fan speed has been out of control
☆ 5 times	X	E4	Indoor room temperature sensor T1 open circuit or short circuit
☆ 6 times	X	E5	Evaporator coil temperature sensor T2 open circuit or short circuit
☆ 9 times	X	E7	Indoor PCB /Display board communication error
☆ 7 times	X	EC	Refrigerant Leakage Detection
☆3 times	O	F2	Condenser coil temperature sensor T3 or T4 open circuit or short circuit(only for $\geq 22k$ heat pump models)

O (light) X (off) ☆ (flash)